
# **INSTRUCTIONS** 5"/6" Recessed Retrofit



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com


### R6R109XXUNVTWS R6R149XXUNVTWS
 
### IMPORTANT

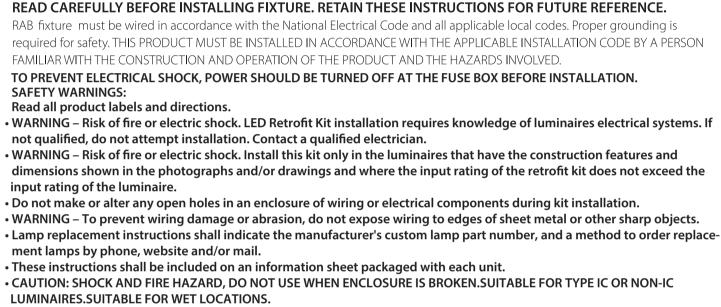

- WARNING RISK OF FIRE OR ELECTRIC SHOCK. DO NOT ALTER, RELOCATE, OR REMOVE WIRING, LAMPHOLDERS, POWER SUPPLY, OR ANY OTHER ELECTRICAL COMPONENT.
- LED retrofit kits that reuse existing components, such as lampholders, shall include a statement in the installation instructions that advise the kit installer to examine all parts that are not intended to be replaced by the retrofit kit for damage and replace any damaged parts prior to installation of the retrofit kit.

# WHAT'S IN THE BOX





Fixture (1)

E26 adapter (1) Lu

Lumi Sticker(1)

# TOOLS NEEDED

The Recessed LED Downlight is designed to fit into the most common 5"/6" housing. No tools are necessary for installation.

# MIN. LAMP COMPARTMENT DIMENSIONS

#### Installation with Existing Housing

Min lamp compartment dimensions - Dia: 5.51in, Height: 7.40in. Compatible with most common 5/6" Recessed housings

# **INSTRUCTIONS** 5"/6" Recessed Retrofit




RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com


### INSTALLATION

Before installing these products or doing any maintenance, make sure to turn off the power supply.

1. Check the dimension of recessed luminare and the lampholder type to see if the retrofit can fit the housing. (Fig. 1)

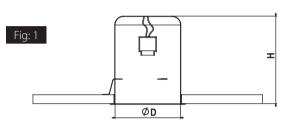


2. Install the E26 adapter into the lampholder of luminaire, then plug the connector into female terminal of fixture. (Fig.2)

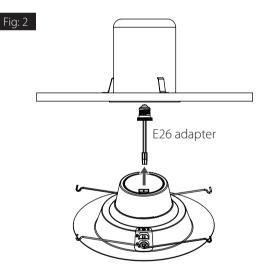


rablighting.com

### **INSTALLATION** (cont'd)


3. Squeeze torsion springs as shown and install into the metal brackets inside the recessed housing. For proper installation, the torsion springs should be seated within the brackets and on both sides of the housing. (Fig.3)

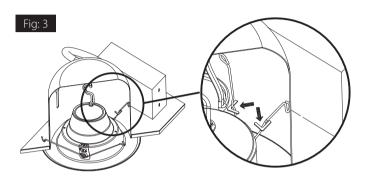

 4. Carefully place wires into fixture and push the LED trim into the housing until flush with ceiling. (Fig.4)



### DIMENSIONAL DRAWINGS

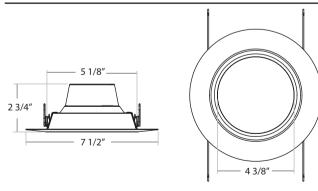

**Free Lighting Layouts** 

Answered online or by request

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.



**Easy Answers** Tech Help Line Visit our website for product info

e-mail Call our experts: 888 722-1000 Answered promptly - sales@rablighting.com

5/6INREC-IN-1219

RAB WARRANTY: RAB's warranty is subject to all terms and conditions found at rablighting.com/warranty.