## INSTRUCTIONS

# A17 FA AREA LIGHT

## ADJUSTABLE UNIVERSAL POLE MOUNT KIT INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com



### **IMPORTANT**

#### READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.


RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING: Make certain power is OFF before installing or maintaining fixture.

#### INSTALLATION

#### Notice: Adjustable angle is 0-35°.

- 1. Remove the Cover Plate from the Universal Arm by loosening (4) Screws as shown in Fig. 1.
- 2. Remove Bracket from Univeral Arm by loosening Bolt as shown in Fig. 2.
- 3. Feed Fixture wires through the Bracket then line up to the Fixture, secure with (4) Screws (provided) as shown in Fig 3.
- 4. Mount the Arm to the Bracket and secure with Bolt as shown in Fig. 4.
- 5. Replace Cover Plate on Arm and secure with (4) Screws as shown in Fig. 5.

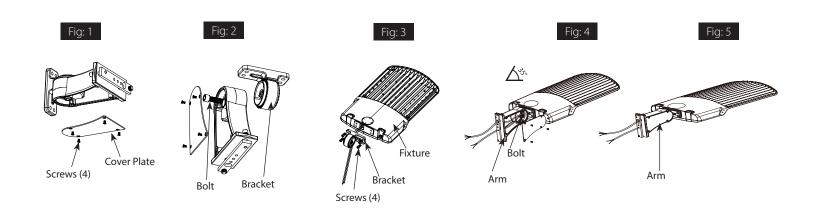

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.

