# INSTRUCTIONS GLED® INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com



# **IMPORTANT**

#### READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.


RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.


WARNING: Make certain power is OFF before installing or maintaining fixture. No user serviceable parts inside. CAUTION: For proper weatherproof function all gaskets must be seated properly and all screws inserted and tightened firmly. Apply weatherproof silicone sealant around the edge of the ceiling mounting box and/or junction box. This is especially important with an uneven ceiling surface. Silicone all plugs and unused conduit entries.

# **CEILING MOUNTING**

Mount the fixture to a Junction Box (not supplied) as follows:.

- 1. Mount the Square Ceiling Plate (Fig. 1) to a square junction box (not supplied). Use weatherproof silicone sealant between the Square Ceiling Plate and mounting surface.
- **2.** Attach **Tether Cable** to the **Housing** with **Screw** (*provided*) as shown in Fig. 2.
- 3. Hang Housing on Ceiling Plate Hooks (Fig. 3). Use appropriate UL approved wire connectors as required by code to complete wiring. Be careful not to pinch wires. WARNING: To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- 4. Swing Housing closed and slide as indicated by Directional Arrows (Fig. 3) to lock the Housing onto the Square Ceiling Plate.
- 5. To unlock the fixture, slide the fixture in direction opposite to RAB Logo and unhook it from Square Ceiling Plate.

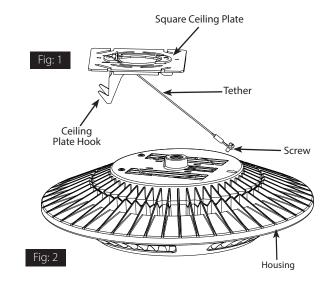

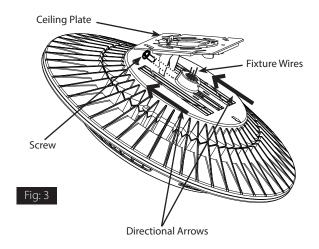

# INSTRUCTIONS

# GLED® INSTALLATION




RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

# ON/OFF WIRING

Universal voltage driver permits operation at 120 to 277VAC, 50 or 60Hz. For Non-Dimming follow the wiring directions as shown in Fig. 4.


- 1. Connect the black fixture lead to the (+) LINE supply lead.
- 2. Connect the white fixture lead to the (-) **COMMON** supply lead.
- Connect the bare copper Ground wire from fixture to supply ground

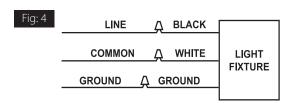

# 0-10V DIMMABI F WIRING

Universal voltage driver permits operation at 120V thru 277V, 50 or 60 Hz. For 0-10V Dimming follow the wiring directions as shown in Fig. 5.

- 1. Connect the black fixture lead to the (+) LINE supply lead.
- 2. Connect the white fixture lead to the (-) COMMON supply lead
- Connect the GROUND wire from fixture to supply ground. Do NOT connect the GROUND of the dimming fixture to the output.
- 4. Connect the purple fixture lead to the (V+) DIM lead.
- 5. Connect the pink (or gray) fixture lead to the (V-) DIM lead.
- 6. Cap the yellow fixture lead, if present. Do NOT connect.

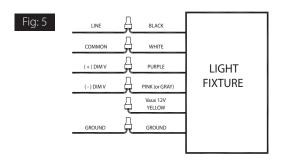

## **CLEANING & MAINTENANCE**

CAUTION: Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is energized.

- 1. Clean lens with non-abrasive glass cleaning solution.
- 2. Do not open the fixture to clean the LED. Do not touch the LED.

### TROUBLESHOOTING

- 1. Check that the line voltage at the fixture is correct. Refer to wiring directions.
- 2. Is the fixture grounded properly?
- 3. Is the photocell, if used, functioning properly?

**Note:** These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.



GLED - IN - 1121

73175-RAB