INSTRUCTIONS

X17™ FLOODLIGHT SLIPFITTER KIT INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com



IMPORTANT

READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.


RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING: Make certain power is OFF before installing or maintaining fixture.

INSTALLATION

Notice: 0° - 90° of angle adjustment.

- 1. Secure Adapter Bracket to Housing with (2) Screws (provided). Feed Housing wires through Adapter Bracket as shown in Fig.1.
- 2. Feed Housing wires through Slipfitter Bracket and secure to the Adapter Bracket with (4) Screws as shown in Fig. 2.
- 3. Continue wire feed through the Slipfitter Mount and secure to the Slipfitter Bracket with Locking Bolt as shown in Fig. 3.
- 4. Wire the **Housing** leads to supply wires using UL listed wire connectors according to NEC and local codes.
- 5. To adjust **Housing** angle, loosen **Locking Bolt** and set **Housing** to desired angle.
- 6. Tighten the **Locking Bolt** to set angle.

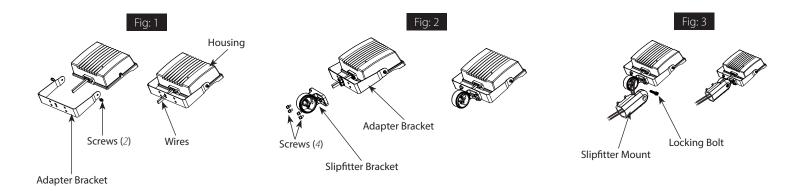

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.

