H17™ FIELD-ADJUSTABLE INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com







H17 / H17S

H₁₇XL

IMPORTANT


READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

 
WARNING: Make certain power is OFF before installing or maintaining the fixture. No user serviceable parts inside. Suitable for wet locations. Maximum ambient temperature suitable for use in up to 50° C (122° F).

HOOK MOUNTING

- 1. Screw the **Hook** into the **Fixture**, tighten and secure with **Set Screw** (*Fig.* 1).
- Hang the Fixture on a ceiling hook or chain (by others). Ensure
 the Tether Cable (only for H17XXL and H17XXL/480) is secured
 on the Fixture. Secure the other end of the Tether Cable to the
 mounting structure as shown in Fig. 2.
- 3. After installation, connect the fixture wires to power supply. Use appropriate UL approved wire connectors as required by code to complete wiring (*Fig. 30*).

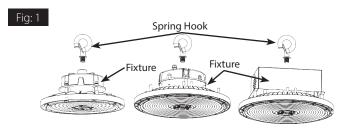






SURFACE MOUNTING

Accessory ordered separately - Model # H17-SM Kit H17XXL-SM KIT.


- 1. Align the Surface Mount Kit screw holes with the Heat Sink as shown in Fig. 3 and install the Surface Mount Kit onto the Heat Sink with (4) Screws (provided) as shown in Fig. 4.
- 2. Secure the Surface Mount Kit to mounting surface (Fig. 5).
- 3. After installation, connect the fixture wires to power supply. Use appropriate UL approved wire connectors as required by code to complete the wiring (*Fig. 30*).
- 4. Loosen **Pivot Bolts** and swivel the fixture to the desired angle. Fixture can adjust 50° to the left or right vertically (*Fig. 6*), tighten **Pivot Bolts**.

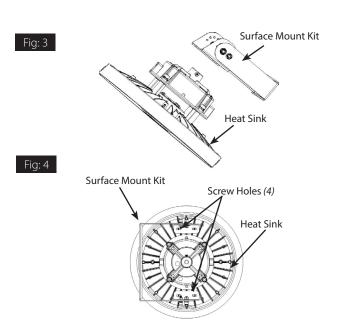

H17™ FIELD-ADJUSTABLE INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

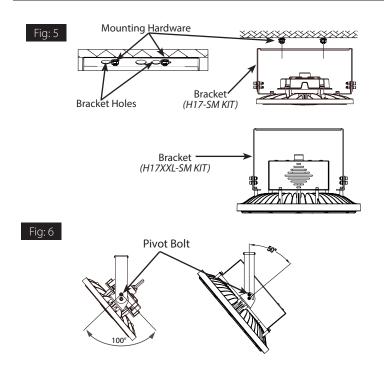

FIELD-ADJUSTMENT

Follow instructions below to change fixture **Power** (*W*) and/or **Color Temperature** (*CCT*) from the factory settings.

Factory Settings:


H17S: 100W/4000K (120-277V ONLY) H17: 150W/4000K (120-277V ONLY) H17XL: 240W/4000K (120-277V ONLY) H17XXL: 500W/4000K (120-277V and 480V)


- 1. Locate the Field-Adjustable Switches on Fixture housing as shown below. Remove **Plug.**
- 2. Select **Power** (*W*) and/or **Color Temperature** (*CCT*) by sliding the respective switch to the desire setting (*Fig. 10*). Re-install the **Plug**.


PENDANT MOUNTING

Accessory ordered separately - Model # H17-PM KIT H17B-PM KIT, H17XXL-PM KIT, H17XXLB-PM KIT

- 1. Loosen **Set Screws** on the Fixture as shown in (*Fig. 7*). Mount the **Pendant Kit** onto the driver housing using (1) Bolt (*provided*) to secure the **Pendant Kit** to driver housing, tighten **Set Screw**.
- 2. Insert **3/4" NTP Pendant Stem** (by others) **into** the Pendant Kit and secure with **Set Screw** (Fig. 8 & 9).
- 3. After installation, connect the fixture wires to power supply. Use appropriate UL approved wire connectors as required by code to complete wiring (*Fig. 30*).

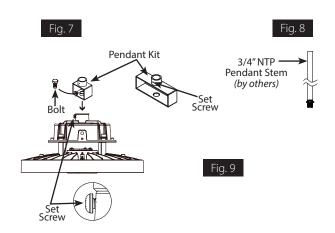

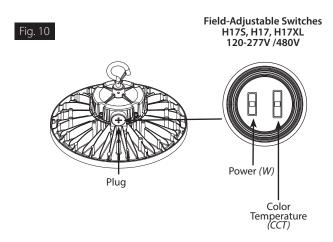

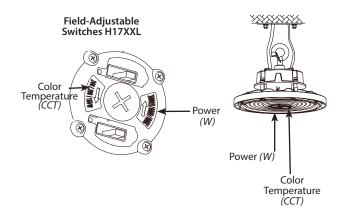

H17™ FIELD-ADJUSTABLE INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

Fig.18

POLYCARBONATE REFRACTOR MOUNTING

(ACCESSORY KIT, DO NOT USE WITH H17XXL)

Accessory ordered separately - Model # H17-RPC and H17XL-RPC.


- 1. Align the **Refractor Screw Holes** with the **Heat Sink** as shown in Fig. 12 and 13.
- 2. Install **Refractor** onto the **Heat Sink** as shown in Fig. 14. Secure the **Refractor** to the **Heat Sink** with (4) **Screws** (provided), as shown in Fig. 15.


DROP LENS MOUNTING


(ACCESSORY KIT, DO NOT USE WITH H17XXL)

Accessory ordered separately - Model # H17-RDL, H17XL-RDL.

- 1. Place the **Drop Lens** on the **Reflector** as shown in Fig.16 & 17.
- 2. Clamp the **Steel Ring** onto the **Drop Lens** and secure with **Spring** as shown in Fig.18 & 19.

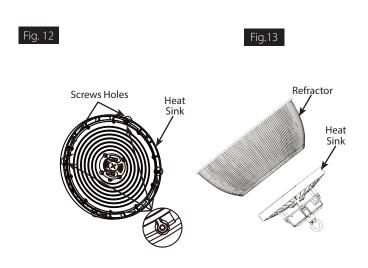

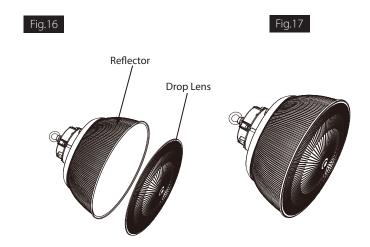

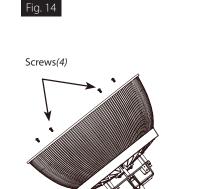


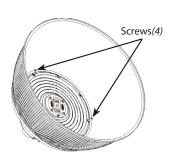


Fig. 15



H17™ FIELD-ADJUSTABLE INSTALLATION

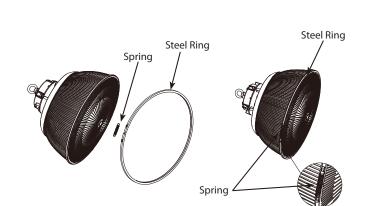

RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

ALUMINUM REFLECTOR MOUNTING


Accessory ordered separately - Model # H17-RAL, H17XL-RAL H17XXL-RAL.

- 1. Align the **Reflector Screw Holes** with the **Heat Sink** as shown in Fig. 20 & 21.
- 2. Install **Reflector** onto the **Heat Sink** as shown in Fig. 22.
- 3. Secure the **Reflector** to the **Heat Sink** with (4) **Screws** (provided) as shown in Fig. 23.

WIRE GUARD MOUNTING

Accessory ordered separately - Model # H17-WG, H17B-WG H17XL-WG, H17XLB-WG, H17XXLB-WG

- 1. Align the **Wire Guard Screw Holes** with the **Heat Sink** as shown in Fig. 24 & 25.
- 2. Install the Wire Guard onto the Heat Sink.
- 3. Secure the **Wire Guard** to the **Heat Sink** with *(4)* **Screws** *(provided)* as shown in Fig. 26.

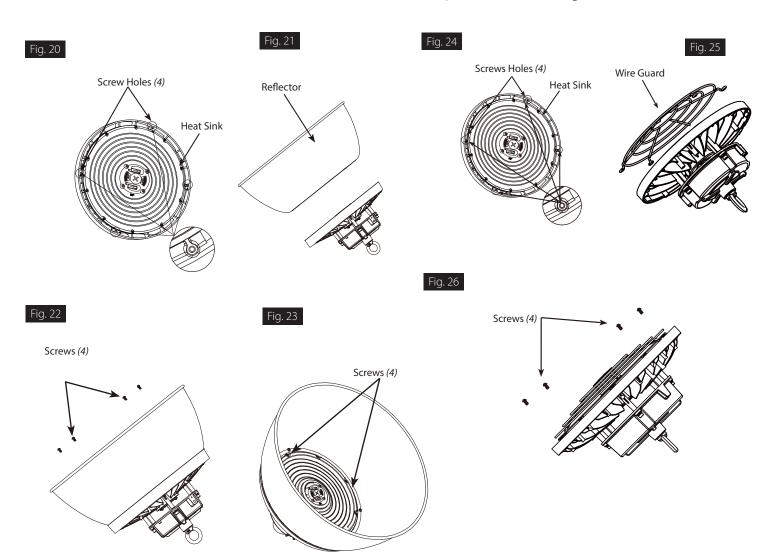

H17™ FIELD-ADJUSTABLE INSTALLATION




RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

WIRE GUARD MOUNTING

Accessory ordered separately - Model # H17-DWG, H17XL-DWG.

1. Align the **Wire Guard** with **Heat Sink** and secure with (4) **Screws** (provided) as shown in Fig. 27.




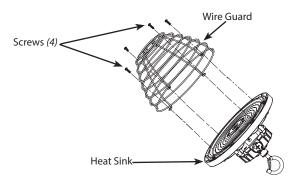


DROP LENS MOUNTING

Accessory ordered separately - Model # H17-DDL, H17XL-DDL.

1. Align the **Drop Lens** with **Heat Sink** and secure with (4) **Screws** (provided are 4 short screws and 4 long screws) as shown in Fig. 28.

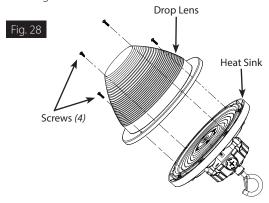


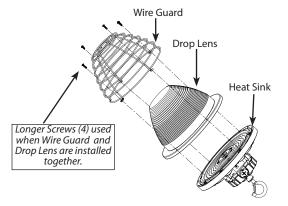

MOTION SENSOR INSTALLATION

Accessory ordered separately - Model # MVS50, PIR40 MVS50/LCB, PIR40/LCB. Optional remote MSR1 sold separately for custom settings.

- 1. Ensure power is off to the fixture to avoid risk of shock.
- 2. Be sure to remove Sensor pin protector from the sensor before installing.
- 3. Remove 1/2" Knockout with a screwdriver and install the Sensor Kit onto fixture (Fig. 11). Caution do not over-tighten Sensor.

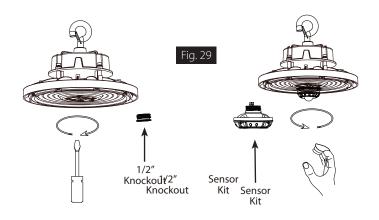

BATTERY BACKUP

For Battery Backup accessory, see EMHB30, EMHB30/LCB EMHB30/B, EMHB60, EMHB60/LCB, EMHB60/B.

NOTE: For H17XXL, see special wiring instruction below, Fig. 32.

H17™ FIELD-ADJUSTABLE INSTALLATION




RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

WIRING

RISK OF FIRE. Universal voltage driver permits operation at 120V through 277V, 50 or 60 Hz. Units ordered with /480V suffix are 480V **ONLY**, 50 or 60Hz. For 0-10V dimming follow wiring directions as shown in Fig. 30.

NOTE: For H17XXL, see special wiring instruction below Fig. 31.

Fig. 30

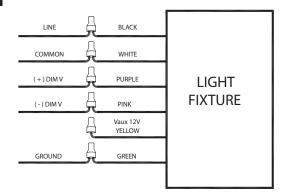

CLEANING & MAINTENANCE

CAUTION: Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is energized.


- 1. Do not open fixture to clean the LED. Do not touch the LED.
- 2. Do not touch reflector, lens or trim cone.
- 3. Do not clean any fixture surface with wood-base cleaning material such as paper towels or tissues.

TROUBLESHOOTING

- 1. Check that the line voltage at the fixture is correct. Refer to wiring directions.
- 2. Is the fixture grounded properly?

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.

H17XXL (ONLY)

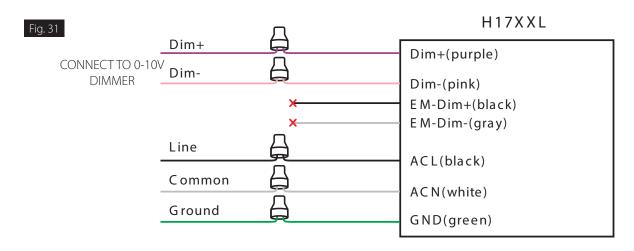

H17™ FIELD-ADJUSTABLE INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

H17XXL Battery Backup (Emergency Wiring)

Fig. 32

