

INSTRUCTIONS


TEMP LIGHT INSTALLATION




RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

**** DON'T TOSS IT—RECYCLE IT! MAKE THE SUSTAINABLE CHOICE BY RECYCLING THIS FIXTURE AT END OF LIFE WITH A LICENSED RECYCLING PROVIDER. ****

TEMP34-100

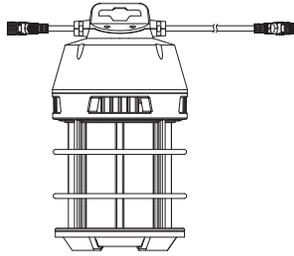

TEMP34-150

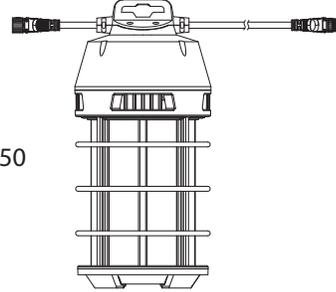

IMPORTANT

READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RAB temp light must be wired in accordance with the National Electrical Code and all applicable codes. Proper grounding is required for safety.


THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING:

- Operating temperature: -30°C to 60°C (-22°F to 140°F).
- Please read this manual carefully before use, make sure the application is in accordance with the instructions.
- To reduce the risk of electric shock and fire, do not exceed string maximum wattage including any additional string loads.
- This device is suitable for dry and damp locations.
- Disconnect the power to avoid shock when the equipment is wet.
- This device is not intended for use with emergency exits.
- The product should not be installed in heat and sealed environment and corrosive gases, and other places, so as not to affect the service life.
- This luminaire must be installed, tested and maintained by professionals using special equipment.
- Please check the product carefully after opening the package. If any products are damaged, please keep the original package and contact your local dealer.
- MIN . 90°C SUPPLY CONDUCTORS
- Maximum Connections:

Model	Voltage	Quantity
TEMP34-100	120V	6PCS
	277V	13PCS
TEMP34-150	120V	4PCS
	277V	9PCS

BOX INCLUDES

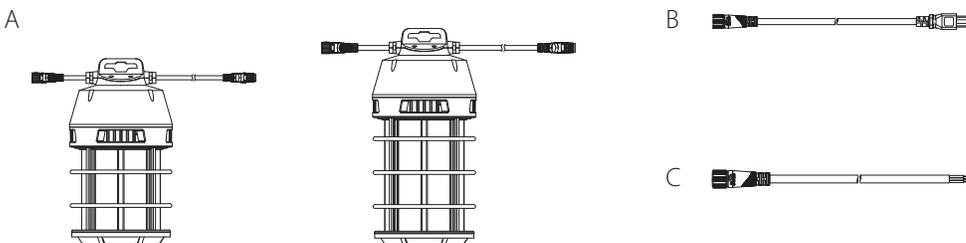

Part	Description
A	Fixture
B	120V Plug
C	1 ft input cable

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.

INSTRUCTIONS

TEMP LIGHT INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

**** DON'T TOSS IT—RECYCLE IT! MAKE THE SUSTAINABLE CHOICE BY RECYCLING THIS FIXTURE AT END OF LIFE WITH A LICENSED RECYCLING PROVIDER. ****

OPTIONALS


TEMP-PLUG/277

277V Temp Light with L7-20P plug, connect flexibly to 277 voltage input.



TEMP-CBL

100-277V Temp Light 25ft extension cable with three M15 female connector, make it easily to daisy chain without wiring.

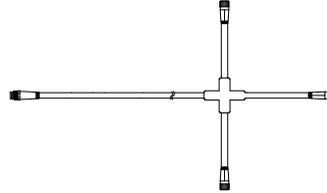

INSTALLATION

Step 1. Turn off the power before installation.

Step 2. The installation steps for a single lamp is (Fig. 1) and (Fig. 2) only.

Step 3. The installation steps for 2 or more products repeat (Fig. 1) and (Fig. 2) then move to (Fig. 3), connect to 120V plug or TEMP-PLUG/277(optional) or 1 ft input cable for power input

Caution - Maximum number of lamp connections: TEMP34-100: Max.6 units at 120V; Max. 13 units at 277V.


TEMP34-150: Max.4 units at 120V; Max. 9 units at 277V.

Lamps may not work as advertised if the number of connected lamps exceeds the allowable quantity.

Lamp can work normally after removing redundant lamps.


TEMP34-100/TEMP34-150(Cable length: 6ft)

Fig: 1

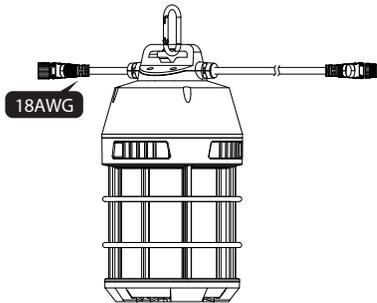

Hang on secure fixed wall or object by stainless steel carabiner


Fig: 2

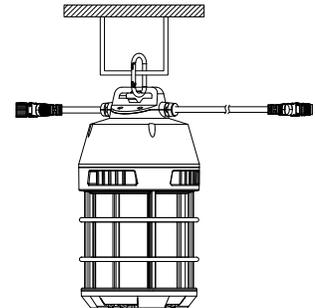

Ensure the fixed wall or object is strong enough to hold 20 lbs

Fig: 3

NOTICE Total 5A max in parallel connection

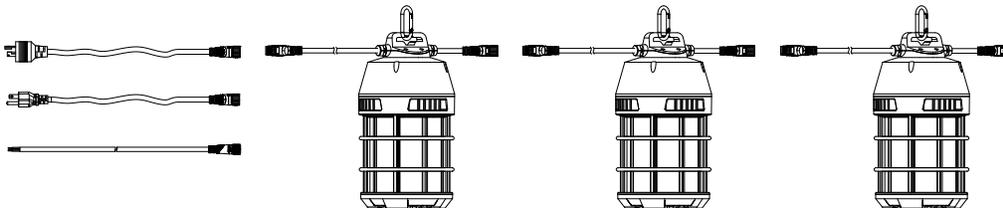

Fast to link more lamps, connect to 120V plug or TEMP-PLUG/277(optional) or 1 ft input cable for power input

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.



Easy Answers

rablighting.com
Visit our website for product info

Tech Help Line
Call our experts: 888 722-1000

e-mail
Answered promptly - sales@rablighting.com

Free Lighting Layouts
Answered online or by request

TEMP34-1008
P-102269

RAB WARRANTY: RAB's warranty is subject to all terms and conditions found at rablighting.com/warranty.