# **INSTRUCTIONS** X17<sup>™</sup> FA FIELD ADJUSTABLE INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com







X17 Slipfitter Mount



X17 Trunnion Mount

### **IMPORTANT**

### READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING: Make certain power is OFF before installing or maintaining fixture. No user serviceable parts inside. WARNING: Do not use an electric generator to test LED fixtures. WARNING: Min 75°C SUPPLY CONDUCTORS.

# KNUCKI F MOUNT

Fig: 1

### (suitable for 15W, 35W, 60W, 80W)

- 1. Secure the fixture to a 1/2" NPS hole in the junction box or landscape post as shown in Fig. 1.
- 2. Make appropriate wire connections per NEC in an approved enclosure (not included) see Fig. 8.
- 3. The Knuckle Arm allows 180° of vertical aiming adjustment depending on the mounting position as shown in Fig. 2.


## SLIPFITTER MOUNT

### (suitable for 105W, 140W)

- 1. Place the Slipfitter over the Tenon and secure the Fixture with the Screws on the side of the Slipfitter as shown in Fig. 3.
- 2. Make appropriate wire connections per NEC in an approved enclosure (not included) see Fig. 8.
- 3. Loosen the Locking Bolt and swivel Fixture to desired angle.

**Pivot Bolts** 

4. Tighten the Locking Bolt.

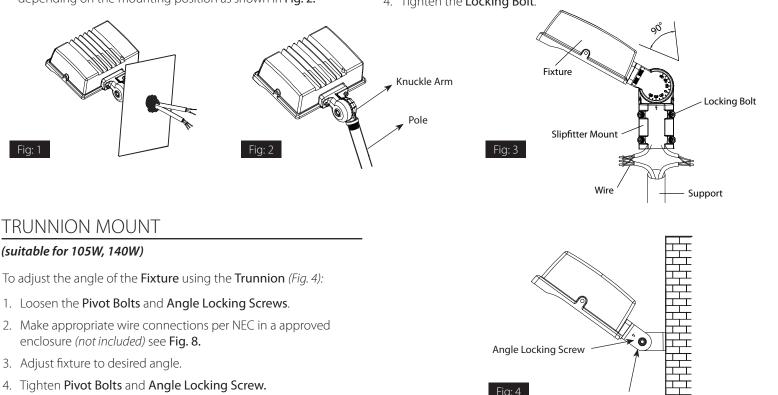

# **INSTRUCTIONS** X17<sup>™</sup> FA FIELD ADJUSTABLE INSTALLATION

# RAB

RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com


# FIELD ADJUSTMENT

Follow instructions below to change fixture Color Temperature (CCT) from the factory settings and Photocell On/Off option.

### Factory Settings: 4000K (CCT)


Fig: 5


- 1. Remove **Selector Switch Caps** by turning counter clockwise using a flat head screwdriver **Fig. 5.**
- 2. Locate the Selector Switches on the fixture Fig. 6,7.
- 3. Select Color Temperature (CCT) by sliding the respective switch to the desired value.
- 4. Select **Photocell** On/Off option by sliding respective switch to the desired value.

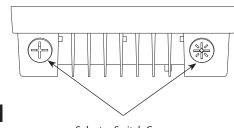

Selector Switch Caps

### 15W, 35W, 60W

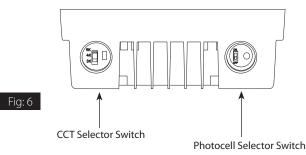

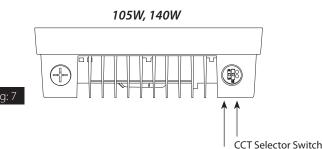


Photocell Selector Switch

# 0-10V DIMMABLE WIRING

Universal voltage driver permits operation at 120V thru 277V, 50 or 60 Hz. For 0-10 Dimming, follow the wiring directions as in **Fig. 8**.

- 1. Connect the Black/Brown fixture lead to the LINE supply lead.
- 2. Connect the White/Blue fixture lead to the COMMON supply lead.
- 3. Connect the Green/Yellow wire from fixture to supply ground. Do NOT connect the GROUND of the dimming fixture to the output.
- 4. Connect the purple fixture lead to the DIM V+ lead.
- 5. Connect the gray fixture lead to the DIM V- lead.
- 6. Cap the yellow fixture lead, if present. Do NOT connect.

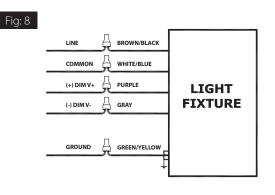

# CLEANING & MAINTENANCE

CAUTION: Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is energized.

- 1. Clean glass lens with non-abrasive glass cleaning solution.
- 2. Do not open the fixture to clean the LED. Do not touch the LED.

### TROUBLESHOOTING

- 1. Is the fixture grounded properly?
- 2. It is recommended to wear gloves to avoid injury during installation.
- 3. If any smoke or spark, please turn off the power immediately.

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.



Easy Answers

© 2021 RAB LIGHTING Inc. Visit our website for product info X17FA-15/35/60/80/105/140 IN-0321 73709-RAB **Tech Help Line** Call our experts: 888 722-1000 e-mail Answered promptly - sales@rablighting.com Free Lighting Layouts Answered online or by request

# INSTRUCTIONS X17™ FLOODLIGHT SLIPFITTER KIT INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com



### IMPORTANT

### READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.


RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING: Make certain power is OFF before installing or maintaining fixture.

### INSTALLATION

### Notice: 0° - 90° of angle adjustment.

- 1. Secure Adapter Bracket to Housing with (2) Screws (provided). Feed Housing wires through Adapter Bracket as shown in Fig.1.
- 2. Feed Housing wires through Slipfitter Bracket and secure to the Adapter Bracket with (4) Screws as shown in Fig. 2.
- 3. Continue wire feed through the Slipfitter Mount and secure to the Slipfitter Bracket with Locking Bolt as shown in Fig. 3.
- 4. Wire the Housing leads to supply wires using UL listed wire connectors according to NEC and local codes.
- 5. To adjust Housing angle, loosen Locking Bolt and set Housing to desired angle.
- 6. Tighten the Locking Bolt to set angle.

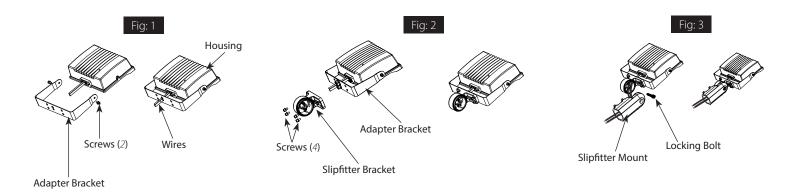

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.



SEX17.60W / 80W IN-0621

73725-RAB

Easy Answers

**rablighting.com** Visit our website for product info **Tech Help Line** Call our experts: 888 722-1000 e-mail Answered promptly - sales@rablighting.com Free Lighting Layouts Answered online or by request

# **INSTRUCTIONS** X17<sup>™</sup> FLOODLIGHT TRUNNION KIT INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com



## IMPORTANT

### READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.


RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING: Make certain power is OFF before installing or maintaining fixture.

### INSTALLATION

#### Notice: 0° - 180° of angle adjustment.

- 1. Feed Housing wires through Bracket A. Secure Bracket A to Housing with (2) Screws (provided) as shown in Fig. 1.
- 2. Feed Housing wires through Bracket B and secure to Bracket A with (2) Screws (provided) as shown in Fig. 2.
- 3. Wire the **Housing** leads to supply wires using UL listed wire connectors according to NEC and local codes.
- 4. To adjust the Housing angle loosen (2) Screws on Bracket B, set to desired angle and tighten (2) Screws.

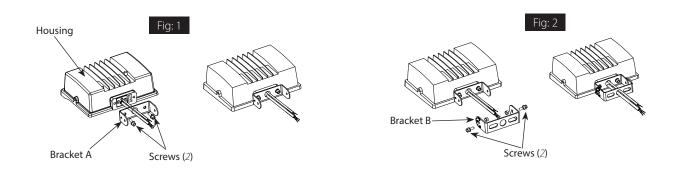

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.



Easy Answers

© 2021 RAB LIGHTING Inc. Visit our website for product info TX17 60W/80W Trunnion Kit - IN-0621 73726-RAB **Tech Help Line** Call our experts: 888 722-1000 e-mail Answered promptly - sales@rablighting.com Free Lighting Layouts Answered online or by request

# INSTRUCTIONS X17<sup>™</sup> FLOODLIGHT WIRE GUARD INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com



### IMPORTANT


### READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING: Make certain power is OFF before installing or maintaining fixture.

### INSTALLATION

- 1. Wire Guard mounts with (2) Screws and Mounting Bar as shown in Fig. 1. Hardware is provided.
- 2. Mount Wire Guard onto Fixture. Line up Mounting Bar with pre-existing Screw Holes in fixture frame as shown in Fig. 2.
- 3. Tighten (2) Screws to secure Wire Guard and Mounting Bar to Fixture as shown in Fig. 3.

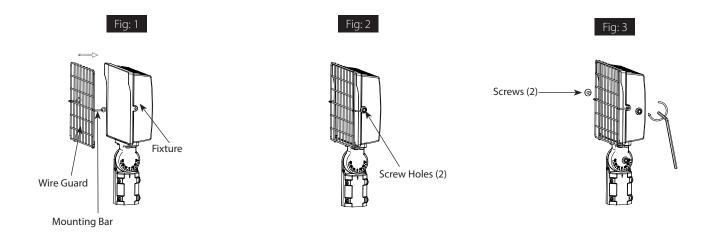

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.



Easy Answers

**rablighting.com** Visit our website for product info Tech Help Line Call our experts: 888 722-1000 e-mail Answered promptly - sales@rablighting.com Free Lighting Layouts Answered online or by request

X17 Wire Guard IN-0521 GDX17FA 15/35/60/80/105/140 73714-RAB