

INSTRUCTIONS

Module Downlight Mounting Plate Installation



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com



ND22-RFRAME
ND22-SFRAME


IMPORTANT

READ CAREFULLY BEFORE INSTALLATION. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

WARNINGS:

- Read all the product labels and instructions before installing fixture.
- Wear safety gloves and other appropriate safety equipment.

COMPATIBLE PRODUCTS

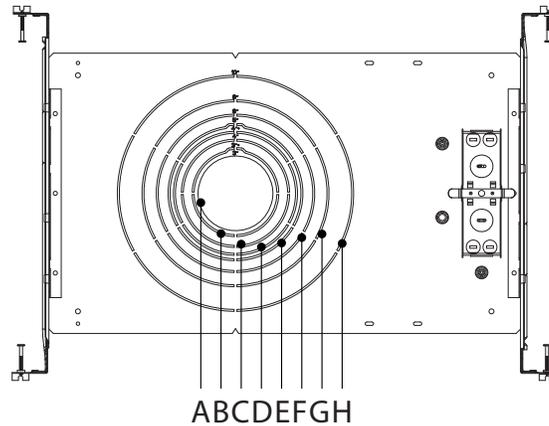

Circular Knockout (CKO) Instructions	Compatible products
A: Ø3"	Commercial Downlight 3"
B: Ø3 7/16"	Modular Downlight 3"
C: Ø4 5/16"	Commercial Downlight 4" Edge-lit Square Wafer 4" Gimbal Wafer 4"
D: Ø4 15/16"	Modular Downlight 3" Modular Downlight 4"
E: Ø5 3/8"	Modular Downlight 3" Modular Downlight 4"
F: Ø6 5/16"	Modular Downlight 3" Modular Downlight 4" Commercial Downlight 6" Edge-lit Square Wafer 6" Gimbal Wafer 6"
G: Ø7 1/2"	Modular Downlight 4" Commercial Downlight 8"
H: Ø9 7/16"	Modular Downlight 4" Commercial Downlight 10"

Note: Please visit rablighting.com for a detailed compatibility list.

INSTRUCTIONS

Module Downlight Mounting Plate Installation



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

INSTALLATION INSTRUCTIONS

1. Fix the brackets on the plate. (fig.1)
2. Use cutting pliers to remove any CKO sections necessary to install the downlight. (fig.2)
3. Place the plate on top of the T-Grid tile where the downlight will be installed. Knock the brackets to the sides of T-Grid. (fig.3)
4. Once the plate is attached to the T-Grid, cut a hole in the tile following the inside of the selected CKO and Follow appropriate downlight installation instruction to complete the installation. (fig.4)

Fig.1

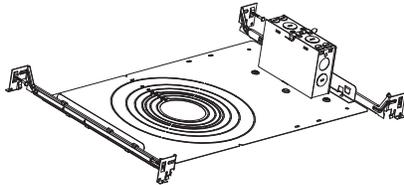


Fig.2

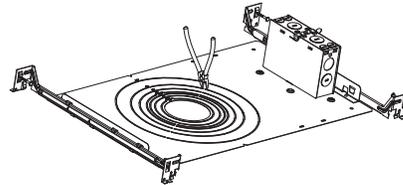


Fig.3

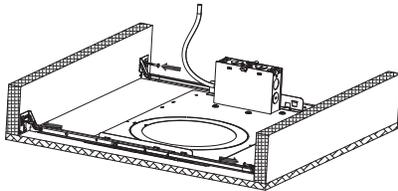


Fig.4

