

INSTRUCTIONS

WP1 FA, WP2 FA, WP3 FA

FIELD-ADJUSTABLE WALL PACK INSTALLATION

RAB®

RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com



WP1 FA 29W



WP2 FA 29-40-60-80W



WP3 FA 50-150W

IMPORTANT

READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

Min 90 °C SUPPLY CONDUCTORS.

WARNING: Make certain power is OFF before installing or maintaining fixture. No user serviceable parts inside.

WARNING: Do not use an electric generator to test LED fixtures.


CAUTION: For proper weatherproofing function, all gaskets must be seated properly and all screws inserted and tightened. This is important with an uneven wall surface. Silicone all plugs and unused conduit entries.

For wet location compliance, fixture must be properly sealed. For moisture seal, apply silicone caulking between the mounting surface and back housing, as well as around the sides of the housing. This is important with uneven wall surface.

WALL MOUNT

Suitable for outdoor applications.

1. Using a screwdriver loosen side **Housing Screws** (2) as shown in **Fig. 1**.
2. Remove the **Housing Back Plate** (**Fig. 2**) and unscrew center **Plug** then using a drill open installation holes in **Housing Back Plate**.
3. Apply **Foam Gasket** (*provided*) to external surface of the **Housing Back Plate** by removing yellow plastic film and adhering to **Housing Back Plate** as shown in **Fig. 3**.
4. Feed supply wires through **Housing Back Plate** center **Plug** as shown in **Fig. 4**.
5. Secure **Housing Back Plate** to surface or junction box (*supplied by others*) with **Screws** (*supplied by others*) as shown in **Fig. 5**.
6. Wire the **Housing** leads to supply wires using UL listed wire connectors according to NEC and local codes (**Fig. 8**). Push all wires into the **Housing**.
7. Mount the **Housing** over the **Housing Back Plate** and secure with (2) **Screws** (*provided*) as shown in **Fig. 6**.
8. For side **Conduit** entry, remove **Conduit** cap using a screwdriver (**Fig. 4**). Feed supply wires through conduit opening with a suitable connector. Wire the **Housing** leads to supply wires using UL listed wire connectors according to NEC and local codes (**Fig. 8**). Push all wires into the **Housing**. Follow mounting instructions.

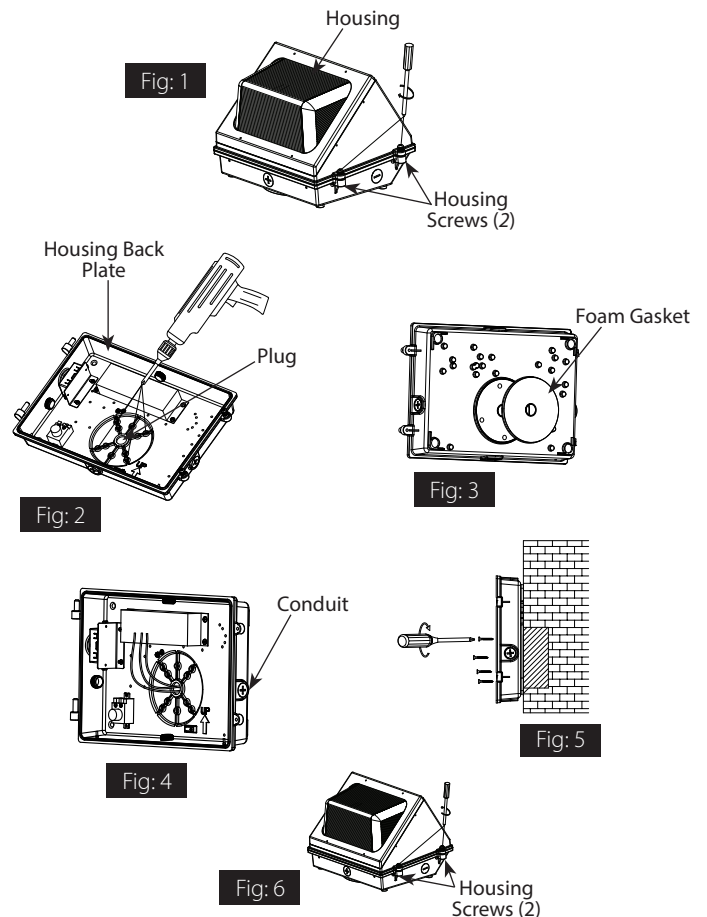

INSTRUCTIONS

WP1 FA, WP2 FA, WP3 FA

FIELD-ADJUSTABLE WALL PACK INSTALLATION

RAB®


RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

FIELD ADJUSTMENT

Follow instructions below to change fixture **Color Temperature (CCT)** from the factory settings and **Photocell On/Off** option.

Factory Settings: 4000K


1. Locate the **Color Temperature (CCT)** and **Photocell On/Off** switches located on **Housing** side as shown in **Fig. 7**.
2. Select **Color Temperature (CCT)** and **Photocell On/Off** position by sliding the respective switch to the desired value.

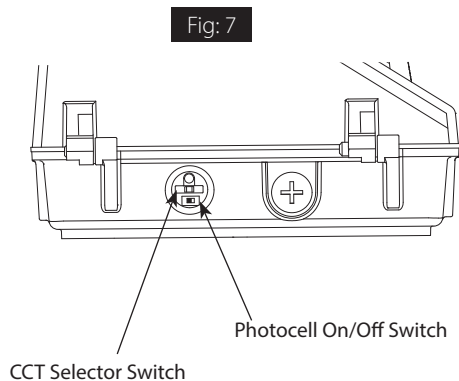

0-10V DIMMABLE WIRING

Universal voltage driver permits operation at 120V thru 277V, 50 or 60 Hz. For 0-10V Dimming, follow the wiring directions as shown in **Fig. 8**.

1. Connect the Black/Brown fixture lead to the LINE supply lead.
2. Connect the White/Blue fixture lead to the COMMON supply lead.
3. Connect the Green/Yellow wire from the fixture to supply ground. Do NOT connect GROUND of the dimming fixture to the output.
4. Connect the purple fixture lead to the DIM V+ lead.
5. Connect the gray fixture lead to the DIM V- lead.
6. Cap the yellow fixture lead, if present. Do NOT connect.

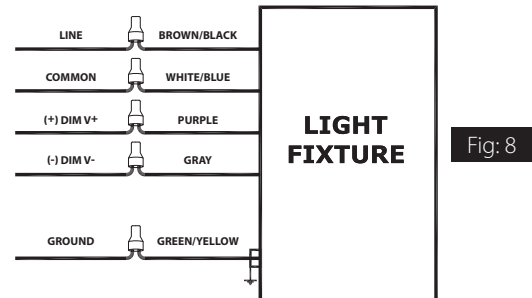

CLEANING & MAINTENANCE

CAUTION: Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is energized.

1. Clean glass lens with non-abrasive glass cleaning solution.
2. Do not open the fixture to clean the LED. Do not touch the LED.

TROUBLESHOOTING

1. Is the fixture grounded properly?
2. It is recommended to wear gloves to avoid injury during installation.
3. If any smoke or spark, please turn off the power immediately.

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.

RAB®

© 2021 RAB LIGHTING Inc.

Easy Answers

rablighting.com
Visit our website for product info

Tech Help Line
Call our experts: 888 722-1000

e-mail
Answered promptly - sales@rablighting.com

Free Lighting Layouts
Answered online or by request

WP1 /WP2 /WP3 FA - IN-0521
73721-RAB