INSTRUCTIONS PLAYER ONE™ RGB INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com



IMPORTANT

READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING: Make certain power is OFF before installing or maintaining fixture. No user serviceable parts inside. CAUTION: For proper weatherproof function all gaskets must be seated properly and all screws inserted and tightened firmly. Silicone all plugs and unused conduit entries.

- DO NOT make or alter any open holes in the luminaire. Do not modify the luminaire.
- Risk of eye injury! Eye protection is required at all times during the installation, operation, and maintenance of the luminaire.
- The high intensity light produced by the luminaire can cause severe damage to the eye if viewed directly at close range. Avoid being in front of a luminaire that is on or wear suitable light blocking protective eye wear such as welding goggles. The luminaire should be positioned so that prolonged staring into the luminaire at a distance closer than 33 feet is not expected.
- NEVER point the aiming laser at any person or animal as it can cause permanent damage to eyes. Use laser only for aiming fixtures as directed.
- CAUTION RISK OF FIRE.
- This product is not available for several special environments, such as places with corrosive gas liquids or high pressure water vapor.
- This luminaire is designed to operate in ambient temperatures ranging from -40°C to 50°C (-40°F to 122°F).

CAUTION WHEN USING THE LASER AIMING ASSEMBLY, NEVER LOOK DIRECTLY INTO THE LASER BEAM (sold separately).

PLAYER ONE™ RGB INSTALLATION





RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com


Fig: 4


POWER BOX MOUNTING PLATE


- 1. Mount **Power Box Mounting Plate** and securely fasten with included hardware (*Fig.* 1).
- 2. Align the center hole of the Horizontal Aiming Protractor and the Mounting Bracket (Fig. 2), attach the Horizontal Aiming Protractor to the Mounting Bracket.
- 3. Secure **Visor** on fixture with (3) PM5*8-SS **Screws** (provided) as shown in Fig. 2
- 4. Optional laser for aiming, loosen (2) CM4*25 Screws from Aiming Laser Assembly (sold separately); attach the Assembly in the Keyhole Slots and tighten (2) Screws (Fig. 3).
- 5. Set fixture in place and install 3/4" Bolt, Flat Washers, Spring Washer and Nut to securely fasten the fixture Mounting Bracket to the mounting structure. A secondary position Locking Bolt (3/8" diameter corrosion resistant steel bolt with nut, flat washer and locking washer) shall be used to lock the position. Do not fully tighten the hardware until the fixture is aimed (Fig. 2).
- 6. Attach the **Power Box** to the **Mounting Plate** with (4) CM6*18 **Screws** (Fig. 4). Complete the wiring according to the wiring diagram with the water proof terminal.
- 7. After aiming is complete, tighten all **Bolts** and **Screws** on side of fixture and mounting hardware.
- 8. PLAYER RGB units have DMX control on the Power Box as shown in Fig. 4.

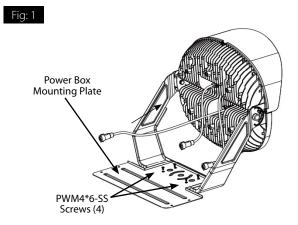

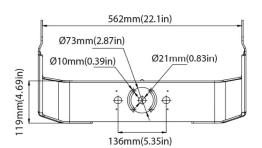

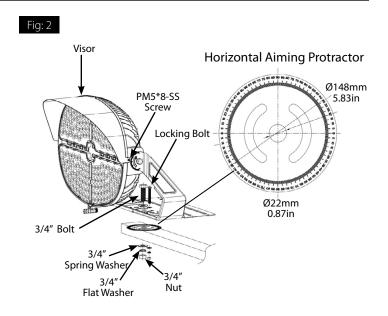

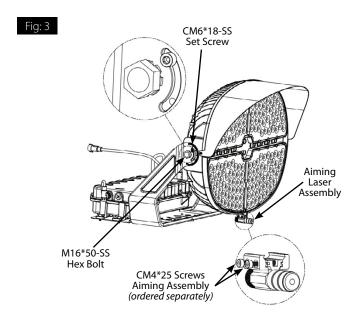

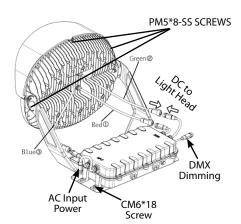

PLAYER ONE™ RGB INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

SLIPFITTER ADAPTOR

Slipfitter Adaptor is sold separately (P1SF).


- 1. Secure the **Visor** to the fixture using (3) PM5*8-SS **Screws** (torque: 30-45 in-lbf or 3.5 to 5 N-m) as shown in Fig. 5.
- 2. Align the center hole of the Horizontal Aiming Protractor with the Mounting Bracket, then attach the Horizontal Aiming Protractor to the Bracket.
- 3. Loosen the (2) CM4*25 Screws from the Aiming Assembly (sold separately), and attach the Aiming Assembly (sold separately) in the Keyhole Slots and tighten the (2) Screws to a torque of 30-45 in-lbf (3.5 to 5 N-m).
- 4. Secure the Slipfitter Adapter onto the Mounting Bracket with (2) 3/4-inch Bolts, Spring Washer, and Nut tightening to 35-45 ft-lbf (47 to 60 N-m). Then snap the pole into the 2-3/8 inch Tenon and lock it in place using (3) 3/8 x 0.787-inch Screws tightened to 10-15 ft-lbf (14 to 18 N-m). Ensure the wiring is completed according to the wiring diagram, observing proper voltage and polarity. Use Waterproof Connectors, tighten the Screws and ensure a secure waterproof condition.
- 5. Slightly loosen the fixture aiming screws just enough to allow the fixture to rotate and tilt. Turn on the **Laser** and use the **Aiming Assembly** to position the fixture according to the lighting design.
- 6. Once aiming is complete, tighten all **Bolts** and **Screws** including the **M1650-SS Hex Bolt** (26-33 ft-lbf (35 to 45 N-m) and the **CM616-SS Set Screws** (35-75 in-lbf (4-8 N-m) on the sides of the fixture and mounting hardware.

Fig: 5 Visor CM6*16-SS 3/4" Bolts Set Screw Yoke Adaptor M16*50-SS Hex Bolt 3/4" 3/4 Spring Washer Flat Washers 3/4 3/8*0.787 Nut Screws 2-3/8"Tenon $\Rightarrow \Leftarrow$ **Waterproof Connectors**

SQUARE BEAM MOUNTING BRACKET

Square Beam Mounting Bracket is sold separately (P1SB).

- 1. Align the center hole of the Horizontal Aiming Protractor with the Mounting Bracket then attach the Horizontal Aiming Protractor to the Bracket (Fig. 6).
- 2. Loosen the (2) CM4*25 Screws from the Aiming Assembly (sold separately) and attach the Aiming Assembly (sold separately) in the Key Hole Slots and tighten (2) Screws to a torque of 21-26 in-lbf (2.5 to 3.0 N-m).
- 3. Secure **Visor** on fixture with *(3)* **PM5*8-SS Screws** *(21-26 in-lbf (2.5 to 3.0 N-m).*
- 4. Hold **Square Beam Mounting Bracket** on top of **Cross Arm** (by others). Insert both clamping **Hex Bolts** through **Washer**, **Bracket**, other side of **Bracket**, lock **Washer** and **Hex Bolt** (35-45 ft-lbf(47 to 60 N-m).
- 5. Set fixture in place and install Bolt, Flat Washer, Spring Washer and Nut to securely fasten the fixture Mounting Bracket to the Square Beam Mounting Bracket (35-45 ft-lbf(47 to 60 N-m). A secondary 3/8 inch diameter corrosion resistant steel Bolt with Nut, Flat Washer and Locking Washer shall be used to lock the orient (15-20ft-lbf (20-30 N-m). Do not fully tighten the hardware until the fixture is aiming, just make sure the fixture is secure.
- Observing proper voltage and polarity, complete the wiring according to the wiring diagram with the Waterproof Connectors, tighten the Screw, make sure it on a good water proof conditions.
- Slightly loosen the fixture aiming screws just enough to allow the fixture to rotate and tilt. Turn on the Laser and using Aiming Assembly to aim the fixture to the proper point may according to the lighting design.
- 8. After aiming is complete, tighten all **Bolts** and **Screws** including **M16*50-SS Hex Bolt** (26-33 ft-lbf (35 to 45 N-m) and **CM6*16-SS Set Screws** (35-75 in-lbs or 4-8 N-m) located on the side of the fixture, along with the mounting hardware.

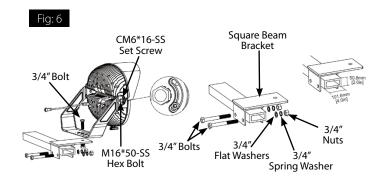


PLAYER ONE™ RGB INSTALLATION




RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

REMOTE POWER BOX

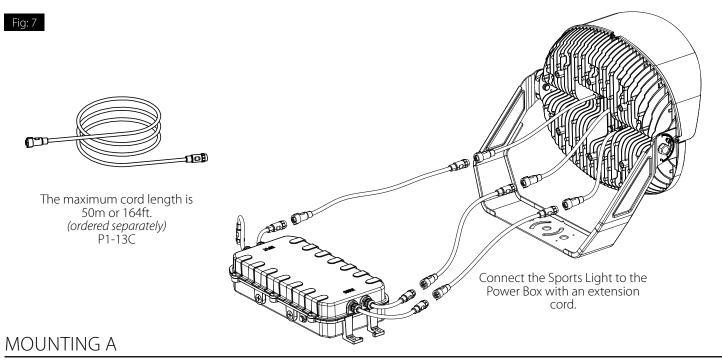

- 1. Secure Power Box Mounting Rail to the light Pole using 3 metal cable ties (by others) see Fig. 8.
- 2. Hang the **Power Box** on **Hook** on the **Mounting Rail** (note the arrow direction is facing up). Secure the Power Box to the Mounting Rail with (4) CM6*16-SS Allen Screws. Connect the input **Waterproof Connector** and the output **Waterproof Connector** respectively.
- 3. The **Power Box Mounting Rail** receives AC power up from the **Junction Box** (by others) and outputs DC Power that is fed back down into the **Junction Box**.
- 4. The **Power Box Mounting Rail** AC and DC cables will be through 42 inch metal conduit with fittings and terminated directly to the **Junction Box** (by others).

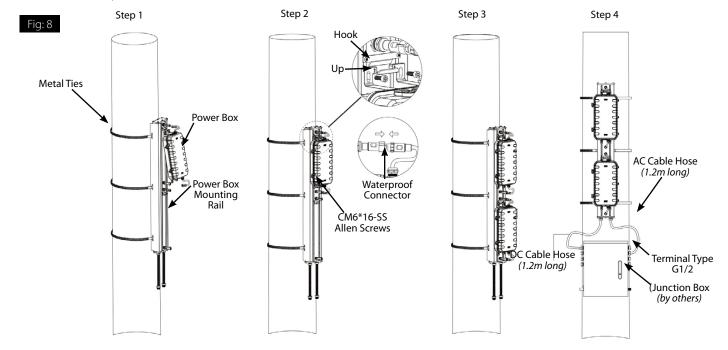


PLAYER ONE™ RGB INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

MOUNTING B

- 1. Attach the Power Box Mounting Rail to the Fixed Plate using (2) M5*6 Dowel Pins as shown in Fig. 9.
- 2. Use (2) CM6*180 Bolts to secure the Power Box Mounting Rail.
- 3. Hang the **Power Box** on the **Hook** of the **Mounting Rail** (ensure the arrow is facing upwards), then tighten the **Screws**. After that, connect the input and output **Waterproof Connectors** respectively.
- 4. The **Power Box Mounting Rail** receives AC power from the **Junction Box** (by others) and outputs DC power, which is then fed back into the **Junction Box** (by others).
- 4. The AC and DC cables of the **Power Box Mounting Rail** will pass through 42 inch metal conduit with fittings and will be directly connected to the **Junction Box** (by others).

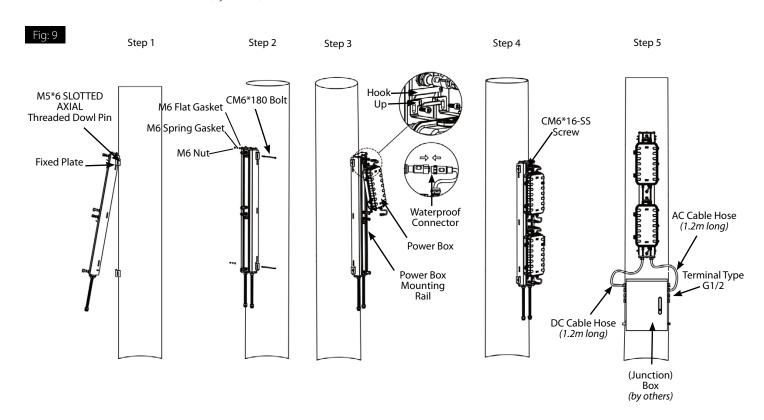


PLAYER ONE™ RGB INSTALLATION




RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com


REMOTE POWER BOX WIRING

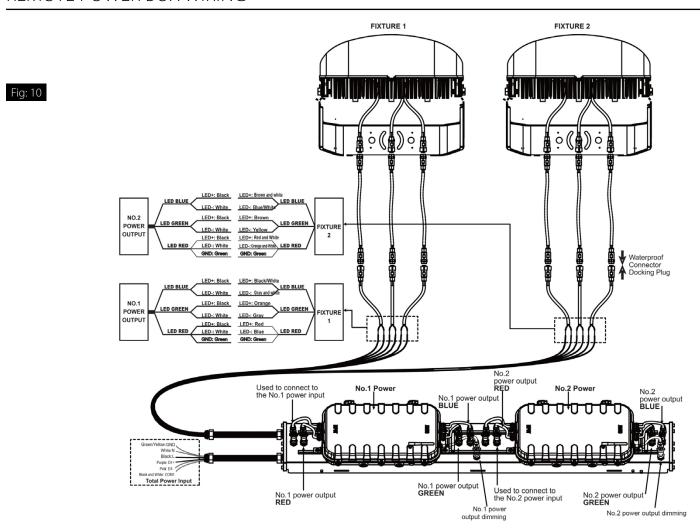

POSITION - TILT

The Position/Tilt angle refers to the direction of the fixture aiming **Left/Right**, **Up/Down**, see Fig. 11.

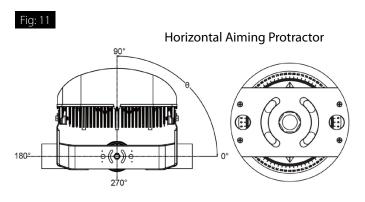

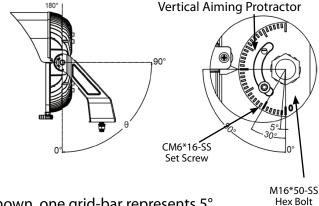

As shown, one grid-bar represents 5°

PLAYER ONE™ RGB INSTALLATION




RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

GLARE CONTROL SHIELD

Glare Control Shield is sold separately. (P1GCS-S-M (Small / Medium), P1GCS-L-XL (Large/X-Large)

- 1. Remove (12) Screw Plugs and (12) TM4*30 Screws from Lens as shown in Fig. 12.
- 2. Secure the Glare Control Shield with the (12) TM4*30 Screws and replace (12) Screw Plugs.

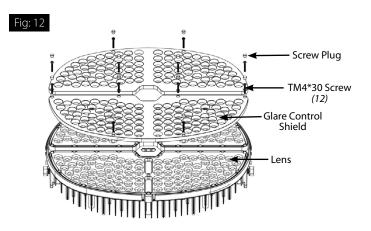

ACCESSORIES (SOLD SEPARATELY)

- P1-SF
- Slipfitter Adaptor
- P1-SB
- Square Beam Mounting Bracket
- P1-MR
- Power Box Mounting Rail
- P1-13C
- Extension Cord (up to 164 feet)
- - **P1GCS-S-M** Glare Control Shield (Small/Medium)
- P1GCS-L-XL Glare Control Shield (Large/X-Large)
- P1-LAS
- Laser Aiming Sight

ACCESSORY LIST

Diagram			Quantity	Diagram		Quantity
Laser Pointer (Sold separately)	① Battery	0	1 pc	9 3/4in Bolt		1 pc
	② Laser aiming assembly		1 set (Two parts, aiming head and cover)	(i) 3/4in Flat Washers		2 pcs
	③ Hexagon key		2 pcs	3/4in Spring Washer		1 pc
④ PM5*8 screws			3 pcs	② 3/4in Nut		1 pc
⑤ CM6*18 screws		4 pcs	3/8in Spring Washer		1 pc	
⑥ PWM4*6 screws		4 pcs	4 3/8in Nut		1 pc	
⑦ Visor		1 pc	® 3/8in Bolt		1 pc	
Horizontal aiming protractor		1 pc	3/8in Flat Washers		2 pcs	
(300mm with LY-176 M15 Connector)		1 pc	(B) DMX dimming Cable Line (For P1 (300mm with LY-117 M12 Connector)	-MR-RGB only)	1 pc	

PLAYER ONE™ RGB INSTALLATION




RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

DMX CONTROL DIMMING

Universal voltage driver permits operation at 120V through 277V, 50 or 60 Hz. Units ordered with /480 suffix are 200V-480V ONLY. Follow the wiring directions as shown in Fig. 13.

- 1. Connect the RED labeled output wire from the DMX driver to the RED labeled input wire of the fixture.
- 2. Connect the GREEN labeled output wire from the DMX driver to the GREEN labeled input wire of the fixture.
- 3. Connect the BLUE labeled output wire from the DMX driver to the BLUE labeled input wire of the fixture.
- 4. Connect the black lead from the DMX driver to the LINE supply lead.
- 5. Connect the white lead from the DMX driver to the COMMON supply lead.
- 6. Connect the GROUND wire from the DMX driver to supply ground. Do NOT connect the GROUND of the dimming fixture to the output.
- 7. Connect the purple wire from the DMX driver to DMX+ lead of the DMX controller (by others).
- 8. Connect the pink wire from the DMX driver to DMX- lead of the DMX controller (by others).
- 9. Connect the COMMON wire from the DMX driver to GROUND lead of the DMX controller (by others).

Fig: 13

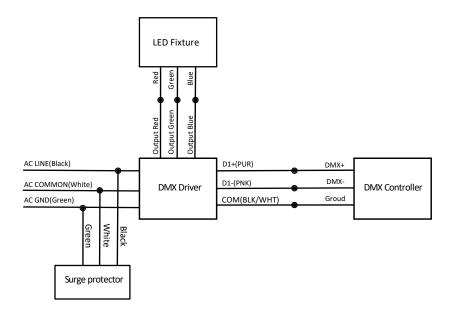

TROUBLESHOOTING

- 1. Check that the line voltage at the fixture is correct. Refer to wiring directions.
- 2. Is the fixture grounded properly?

CLEANING & MAINTENANCE

CAUTION: Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is energized.

- 1. Clean lens with non-abrasive cleaning solution.
- 2. Do not open fixture to clean the LED. Do not touch the LED.

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.

